




(W2) LINK WIRE

(W2) Battery1 Negative link wire to Battery 2 Positive (12v neg fan and relay switch control wire)

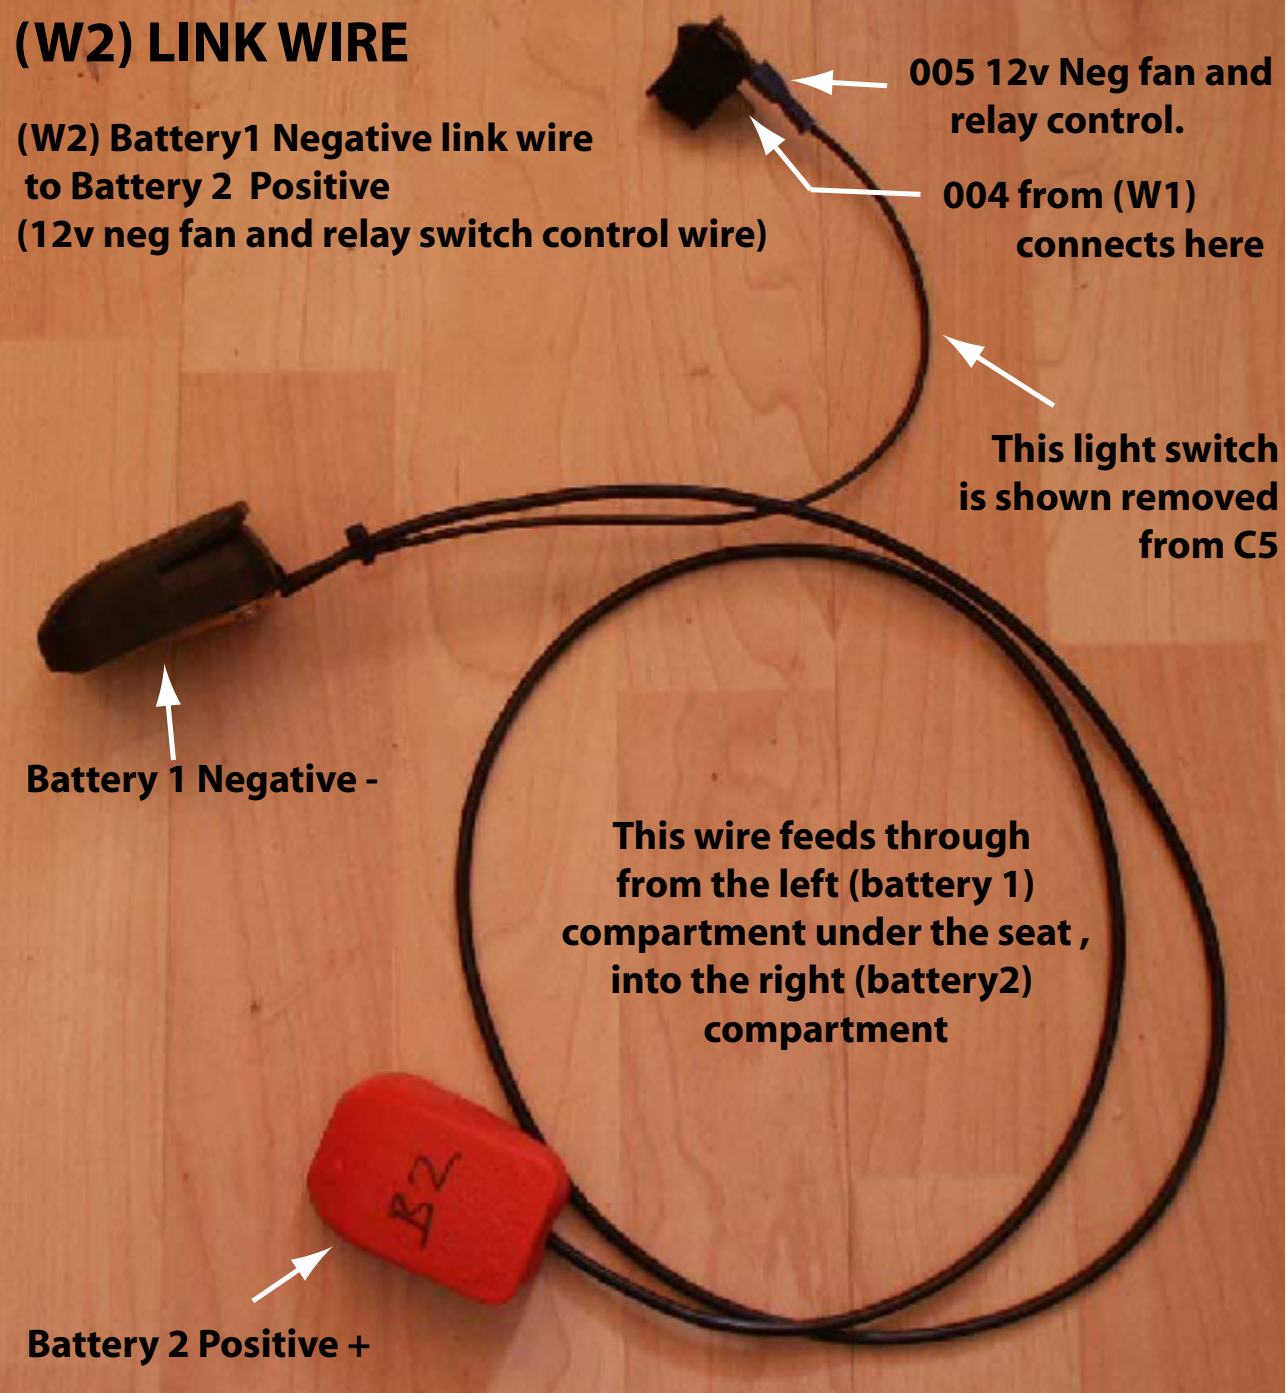

005 12v Neg fan and relay control.

004 from (W1) connects here

This light switch is shown removed from C5

Battery 1 Negative -

This wire feeds through from the left (battery 1) compartment under the seat, into the right (battery2) compartment

Battery 2 Positive +