



008 Connects to Controller B -

(W4) Battery2 Neg - to Motor Controller B-

Battery 2 Negative -