

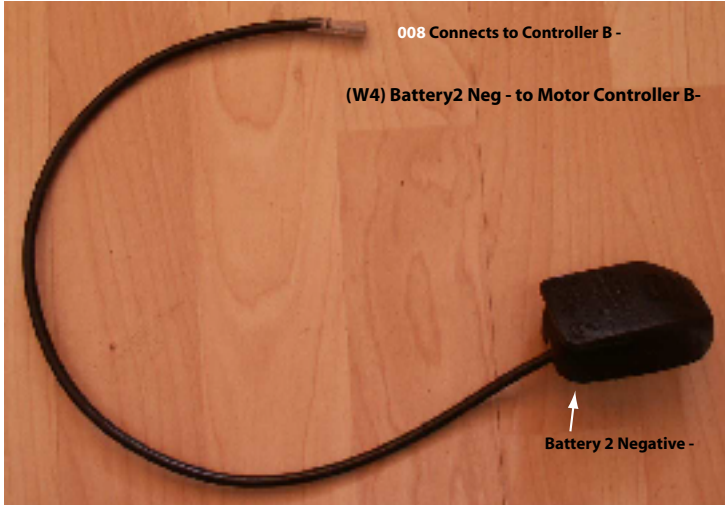


# 24v KIT INSTRUCTIONS


## Step by Step (S6) v2 06-02-06

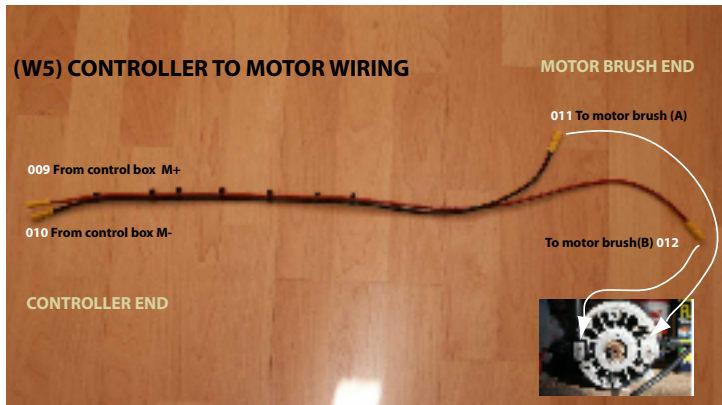

W4 wire needs to be fed through from the front right footwell into the rear compartment and attached 008 (W4) to 014 (W6) shown below

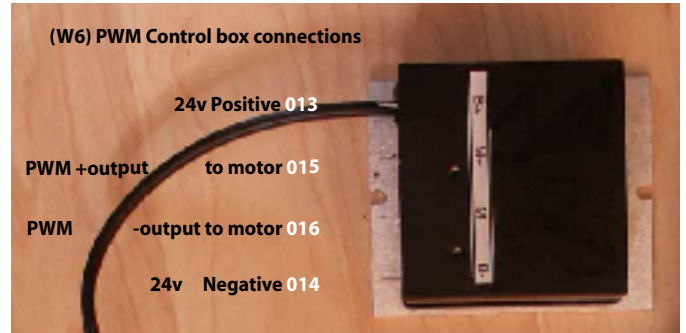

W5 wiring is simply from the controller to the motor. The wiring shown is to plug directly into replacement brushes. Yours may differ slightly with ring ends as opposed to spade connectors. As shown:-  
 (W5)009 plugs into (W6)015  
 (W5)010 plugs into (W6) 016

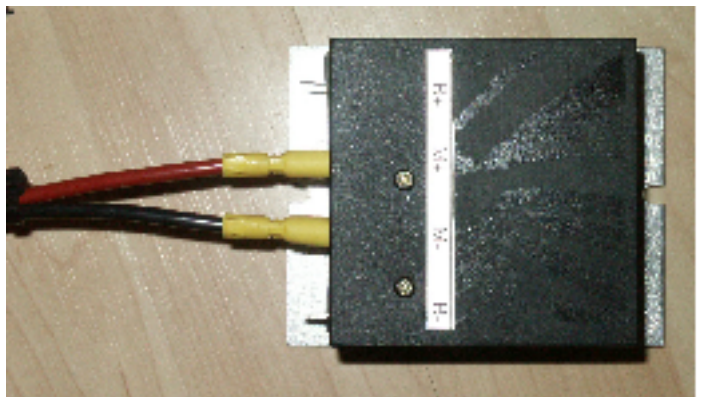

Make careful note of the locations of A and B brushes and the connections to them as shown in W5