

QR FITTING INSTRUCTIONS

Step by Step (QR2) v2 24-02-06




Undo retaining screws and remove control box cover.



Use a 7mm and 8mm long reach socket to undo the power wiring retaining nuts.

There are 2x 7mm nuts and 2x 8mm nuts

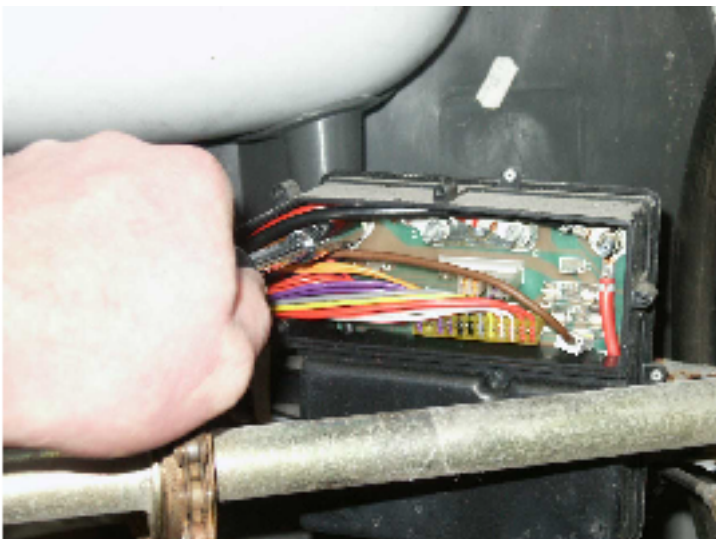

You need to also disconnect the brown +12v connector attached to X5 (shown disconnected here)