



QR FITTING INSTRUCTIONS

Step by Step (QR3) v2 24-02-06

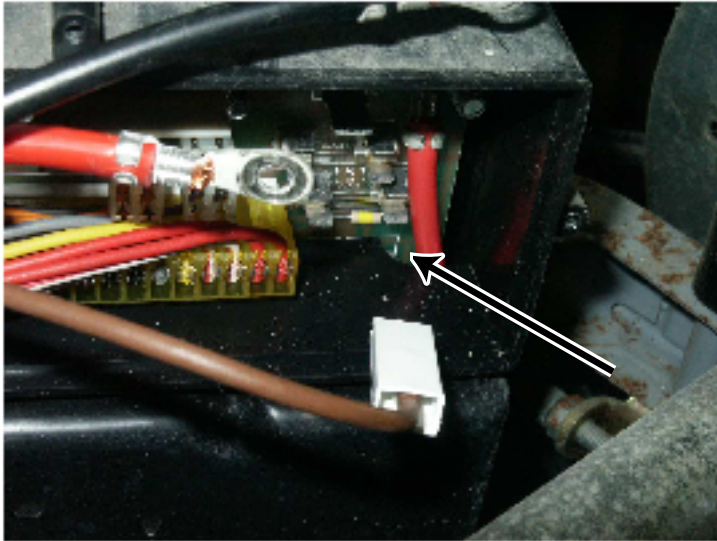

BE VERY CAREFUL NOT TO DROP THE LOOSE NUTS OR SHAKEPROOF WASHERS DOWN THESE HOLES. IF YOU DO; YOU MAY BE ABLE TO SHAKE THEM OUT WHEN REMOVED OTHERWISE YOU WILL **HAVE TO DISMANTLE THE CONTROL BOX**

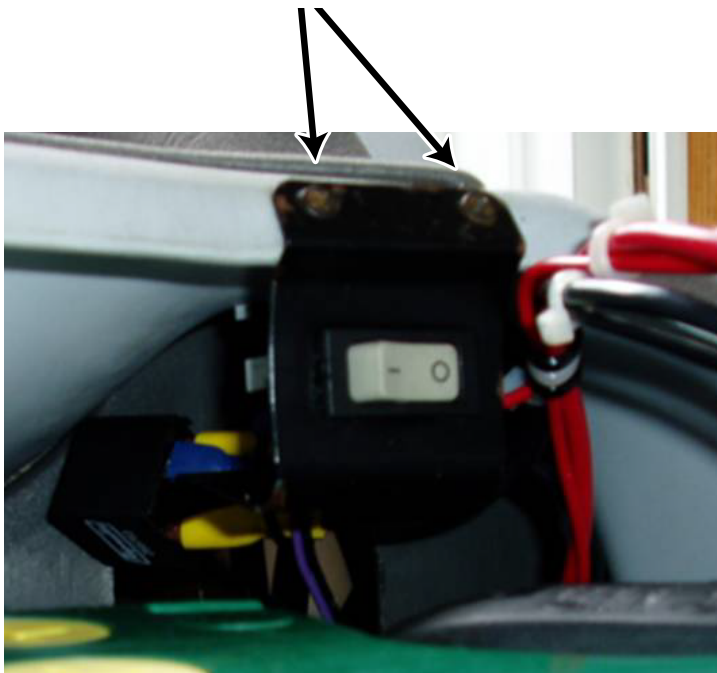

Undo the two screws that hold the lights on/off switch in place.

Pull the two spade connectors off the old light switch.

Pull the old light switch out of its holder.


Push the new light switch into the holder – this might be a tight fit.

Connect the two spade connectors onto the spare terminals on the new light switch.


Screw the light switch holder back into place.



(1)

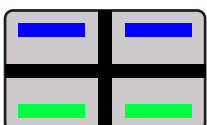

(2) **CORRECT WIRING**

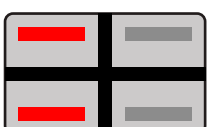

(3) **INCORRECT**



FAILURE TO FOLLOW THESE INSTRUCTIONS WILL CAUSE DAMAGE TO THE CONTROL BOX AND POD

This is the view of the rear of the replacement light switch (1), The correct way to wire it is to connect the wires from the original lighting switch to the marked BLUE connections and the power wiring connectors to the GREEN (2)

IF YOU CONNECT THE PAIRS OF WIRES AS SHOWN IN RED YOU WILL CAUSE DAMAGE (3)