


# QR FITTING INSTRUCTIONS


## Step by Step (QR4) v2 24-02-06

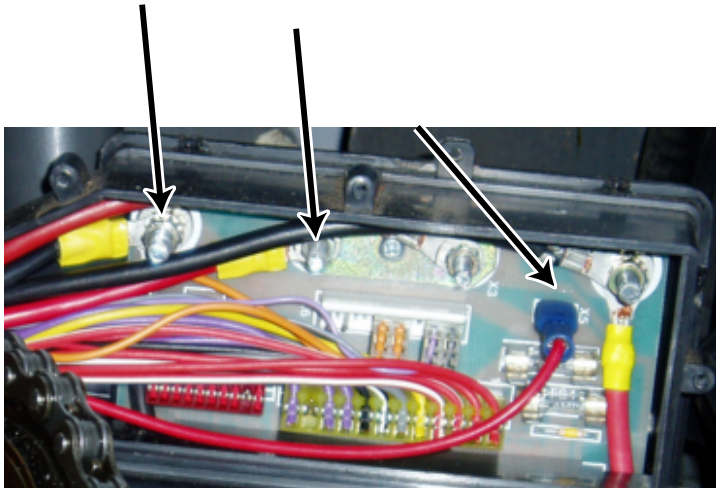

Feed the red/black wires through the rubber grommet, following the path that the old wiring took to get to the control box.

Connect the red wires where the old brown ones went and the black one where the blue was. You should now have something like this:

It's a good idea to use cable ties and/or trunking (not supplied) to hold the new wiring in place in order to stop any fouling with the chain

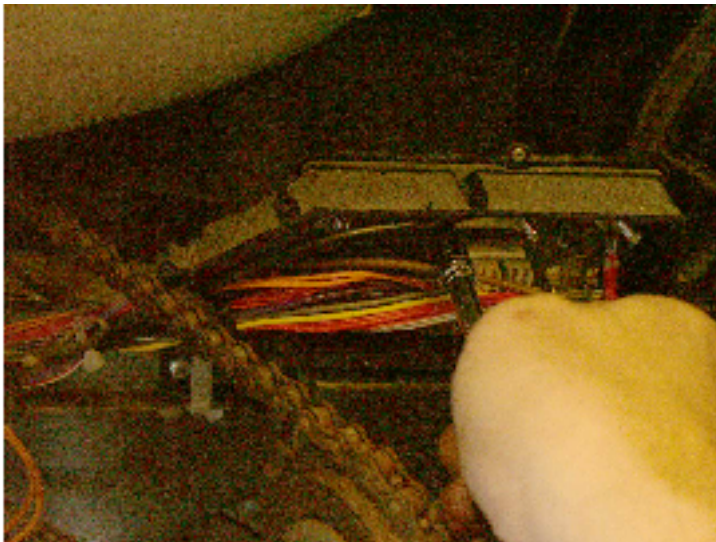

Use a 7mm and 8mm long reach socket to do up the power wiring retaining nuts.

There are 2x 7mm nuts and 2x 8mm nuts



Refit the control box cover and the cover screws.